



## I. INTRODUCTION

The chassis on which Mustang is based was first introduced for Falcon/Comet in 1960. This basic chassis grew to encompass the Mustang, Cougar, Fairlane, Ranchero, Econoline, Torino, Montego, Maverick, Granada, Monarch, and Versailles, and was retired after the 1980 model year to be replaced by the Fox chassis.

During this time, the suspension remained basically the same. Minor year model changes resulted in three families of V8 steering knuckles (spindles) which had unique geometries. The first was the pre 63, the second was 63-65 Falcon and 65-66 Mustang, and a third family starting with 66 Falcon, including 67-73 Mustang and 74-80 Mavericks, Granadas, and Monarchs. For our purposes, we will discuss the 65-66 Mustang type, and the 67-73 Mustang /Maverick/Granada type. The 67-73 Mustang and the Maverick/Granada type have identical ball joint and steering geometries. The steering geometry of the 65-66 differs from the others by a small amount. The outer tie rod geometries remained the same for the entire series with model year differences in the tie rod stud diameter.

Until recently, Mustang and Falcon owners interested in upgrading their front brakes to disc brake type were presented with the choice of an expensive commercial kit, or scrounging junkyards for Granada or Mustang type systems. Some people enjoy the challenge of working in the weeds on a greasy old rust bucket, some don't. Recently, more commercial choices have presented themselves, and the supply of Granada donor cars has greatly diminished. The huge increase in scrap iron and steel prices in 2005 changed the car salvage industry. No urban recycler would hold on to a rust bucket 30 year old car when they can get \$275 or more per ton for its scrap value.

An additional point, original 68-73 Mustang and 75-90 Granada spindles do not have ideal steering geometry for 65-66 Mustangs.

CSRP realized this vacuum created by the lack of knuckle cores and incorrect geometry and set out to reproduce correct geometry knuckles along with the caliper bracket, splash shields, and shield mounting hardware. They are now available NEW at a reasonable cost.

The SWAP.4 kit is a hybrid of the original equipment spindle used with disc brake 1970-73 Mustangs and the caliper system used on 99-2004 GT and base Mustangs. This kit features dual piston aluminum calipers, large brake pads, and extra thick rotors. The system has greater fade resistance due to the superior heat adsorption and dissipation qualities of the extra thick rotor and aluminum caliper.

## What does the SWAP involve?

The SWAP involves replacing everything connected to the ball joints and inner tie rod sleeve, as well as the soft brake hoses, the master cylinder, and installing a proportioning valve. Many installers will also replace suspension components at this time. This discussion is limited to the SWAP itself. The SWAP will require a set of serviceable basic tools. A tie rod separator or a 3 lb. hammer, and a floor jack make the job easier.

## II. DISASSEMBLY

1. Jack the front of the car off the ground and place jack stands on a chassis hard point just to the rear of the front wheels. Perform steps 2-11 on one wheel at a time.
2. Remove the wheel.
3. Have a jar or basin ready. Cut the brake hose near the wheel cylinder. Direct the flow of brake fluid to the container.
4. Turn the steering wheel as to maximize access to the steering knuckle area.
5. Place a jack under the lower control arm and raise it to compress the spring a bit.
6. Remove the sway bar and strut rod bolts.
7. Remove the cotter pins on the ball joints and the outer tie rod. This may prove difficult. Carefully straighten the pins and pull them out with pliers. If they break off, you may be able to drive them out with a nail.
8. Loosen but don't remove the ball joint and tie rod bolts.
9. Loosening the tie rod and ball joint studs from their tapered mount holes requires technique. There are three main accepted methods. You can use a suspension fork to separate the studs from their mount, but you will invariably do damage to the rubber boots and or tie rod. You could use a ball joint separator tool (these are like a bearing puller and can be rented or loaned from auto parts stores). An alternate method is to pound the end of the mounting bosses that the mount holes are bored into, with a 3 lb. hammer. One has to really whale on the boss. It is hard to get the required angle and clearance to hit it hard enough unless the car is on a rack. Persistence is required. Don't worry about breaking the knuckle, it's tough. The stud will eventually be shocked loose from the knuckle.
10. Break the tie rod loose first, then the ball joints.
11. Manipulate the knuckle/brake assembly from the suspension.
12. Separate the old hose from the hard line. It's best to use a flare wrench when tightening or loosening brake fittings. It helps to apply penetrating oil or heat prior to the attempt to remove flare fittings.
13. Evaluate if the tubes are serviceable. Replace or repair any corroded or crimped tubes, or any bad fittings.

14. Remove the one or two hard lines from the master cylinder. A flare wrench makes the job much neater. You may find that the fittings will not come off or that the nut becomes stripped. In this case clamp a vise-grip onto the fitting snugly and strike it with a hammer in order to break the threads loose. It is possible that you will destroy the fitting or tube. The most important tube is the rear brake lead, the next important are the front leads.
15. Remove the two bolts that connect the master cylinder to the firewall.
16. Try to pull the master cylinder straight out from the firewall. Sometimes the master cylinder push rod is mechanically retained in the master cylinder. If so, you will be required to wedge yourself under the dash and disconnect the push rod from the brake pedal. Remove the master cylinder. Be careful not to spill brake fluid on the paint. Immediately remove any spills from the paintwork.

### III. ASSEMBLY

#### A. Mounting the knuckle

1. Reassembly requires attention to detail. Use a decent torque wrench to make final tightening. Work methodically.
2. Lightly lube the ball joint and tie rod mount holes with grease.
3. Mount the lower ball joint boss of the knuckle to the lower ball joint and thread the nut on a few threads. Raise or lower the knuckle/lower control arm until you can get the upper ball joint stud in its mount and screw on its nut.
4. Torque the ball joint nuts such that the hole in the ball joint stud lines up to one of the nut's castleations at a torque between 75-95 ft-lb.
5. Insert the supplied cotter pin and bend to secure.
6. Reconnect the strut rod and sway bar mounts to the lower control arm. Torque the strut rod to 90-115 ft-lb and the sway bar mounts to 6-12 ft-lb.

#### B. Mounting tie rod ends

1. Loosen the nut on the end of the adjusting sleeve for the outer tie rod end.
2. Measure and record the distance from the end of the sleeve, where the tie rod end threads go in, to the center point of the tie rod mounting stud.
3. Remove the old tie rod end.
4. Thread the new tie rod into the sleeve. Note that some applications have driver and passenger side specific outer tie rods.
5. Adjust the depth that the tie rod is threaded such that the distance from the sleeve to center point of the stud matches the original.
6. Lightly grease the tie rod ball stud and mount with grease.
7. Center the steering wheel.
8. Fit the tie rod stud into the mount on the steering arm.

9. Torque the tie rod stud nuts such that the hole in the stud lines up to one of the nut's castellations at a torque between 35-47 ft-lb.
10. Insert the supplied cotter pin and bend to secure.

#### C. Mounting the splash shield

1. Place one of the foam gaskets supplied in the dust shield kit onto the spindle and against the shield mounting surface. See the photo below.
2. Identify the correct shield. The cut out on the shield will frame the caliper bracket. Mount the shield.
3. Place the triangular mounting flange over the shield.
4. Apply a small amount of the blue medium strength thread locker, supplied with the kit, to the shield mounting bolts.
5. Orient the mounting flange such that the triangle corner with a circular piece cut out of it faces as seen in the photo below.
6. Thread the bolts and torque to 9-12 ft-lb.





#### D. Assembly of the under fender brake components

1. Remove the rotors from their packaging. Regardless of package markings, the preferred orientation for the rotor slots for the outboard sides is to radiate from the hub to the edge in a clockwise fashion for the passenger side, and anti-clockwise for the driver side.
2. Pack the wheel bearings with high temp disc brake service type wheel bearing grease (GCLB grade type NLGI 2 specification). This author makes a mess of himself and my surroundings every time I pack bearings. The least messy method I know of is to put a bearing in a baggie along with a moderate quantity of grease and knead the grease into the bearing for a few minutes. Repeat with all four bearings. Make sure to add some more grease to the baggie after each bearing.
3. Stage the bearings on a clean piece of paper until they are used.
4. Inspect the interior of the hub for excessive casting flash (unwanted metal), and casting sand. Use a wire brush and compressed gas to remove any sand present (not common). Remove any flash that would interfere with the pin (very uncommon).
5. Prepare the rotor. Apply a thick layer of the disc brake wheel bearing grease to the inside of the rotor hub and the bearing races. Careful, there may be sharp casting flash inside the hub.
6. Insert the inside (larger bearing) into the inside of the rotor hub such that it seats onto its race. See the image below.





7. Place a wheel grease seal onto its recess on the inside of the hub. Carefully tap the edge of the seal until it becomes secured into place. Tap around the seal to insure it is completely seated. See the image above.
8. Apply a scant amount of grease to the wheel seal's sealing surface on the spindle.
9. Carefully insert the rotor onto the spindle. Don't scrape the seal over the threads on the end of the spindle. You should be able to feel the seal slip over the sealing surface on the spindle. You may need to wobble the rotor a bit to seat the inner bearing onto its place on the stub axle.
10. Insert the outer (smaller) wheel bearing onto the spindle until it seats upon the hub race. The smaller ends of the two tapered bearings should be facing each other.
11. Fit the bearing retainer (large washer) onto the spindle with its tab seated in the keyway on the stub axle.
12. Fit the wheel nut onto the spindle. Hand tighten the nut.
13. Using a properly calibrated torque wrench, torque the wheel nut, while spinning the rotor, to 17-25 ft-lb. Spin the rotor several revolutions. The wheel bearings are now pre-loaded and subsequent retightening will torque accurately.
14. Back off the wheel nut a half turn.
15. Retighten the nut such that it torques to 10-15 ft-lb with the nut oriented such that the cotter pin can fit through both the hole in the spindle and through a castellation on the retainer. Fit the castellated retainer over the nut. Fit a cotter pin through the axle and bend to secure.
16. Wash your hands, wipe everything with a clean cloth, and clean the rotor with brake cleaner.
17. Select the caliper to mount. The part number for the right side is 4038 and the left is 4039. This is probably meaningless to you since you have most likely already removed the calipers from their packaging to admire them, and now have no idea which box they belong in. The caliper that results in the bleeder being in the forward higher position is the correct one. Note the position of the bleeder screws in the image below.





18. The caliper set are pre-assembled on their bracket, with all hardware and brake pads, ready for mounting over the rotor.
19. Apply high strength thread locker to the grade 8 flange head cap screws (bolts) provided and bolt the calipers onto the spindle.
20. Mount the caliper assembly onto its respective rotor. Take care that the pads remain seated in their retainers within the caliper bracket.
21. Alternate the tightening of the caliper mounting bolts until they reach their ultimate torque of 55-75 ft-lb for the 7/16" bolt and 90-120 ft-lb for the 1/2" bolt.



22. Fit a brake hose with a copper crush washers, 1 on the top and 1 and the bottom of the banjo fitting (fitting at caliper end of the brake hose). The brake hose set are identical, left and right.
23. Torque the banjo bolt to 10-15 ft-lb. The hose to caliper mounting order is banjo bolt, copper crush washer, banjo fitting, copper crush washer, caliper.
24. Connect the other end of the brake hose at the terminal end of the original equipment hard brake line, mounted at its location under the fender. The kit includes new mounting hardware, although the OE parts can be used.
25. Your kit may include a set of shims (looks like large thin washers, packaged with the hose mounting hardware). If so, fit these over the end of the hose before mounting the hose on the L-bracket (to make the hose fit tightly on the L-bracket).


26. Check all connections.
27. Repeat these assembly steps on the other side.

#### E. Brake pedal and under hood installation


1. Brake pedal installation:
2. Loosen the 2 nuts that secure the brake pedal support to the steering column.
3. Remove the existing brake pedal and brake light switch assembly.
4. Fit the top of the new brake pedal between the two 3/8" holes punched into the top of the brake pedal support.
5. Insert the long 3/8" bolt through the support and pedal from the driver side of the support. Remove the bolts supporting the steering column or the ones threaded through the firewall if the bracket needs more freedom of movement.
6. Secure the bolt with the 3/8" prevailing torque nut supplied.
7. Retighten the 2 loose bolts on the firewall. This will properly align the support bracket and allow proper orientation of the steering column.





8. Retighten the bolts that secure the pedal support to the steering column.
9. Mounting the booster:
10. See the image below depicting the 67PBU power brake assist upgrade package (available for manual or automatic transmission applications).

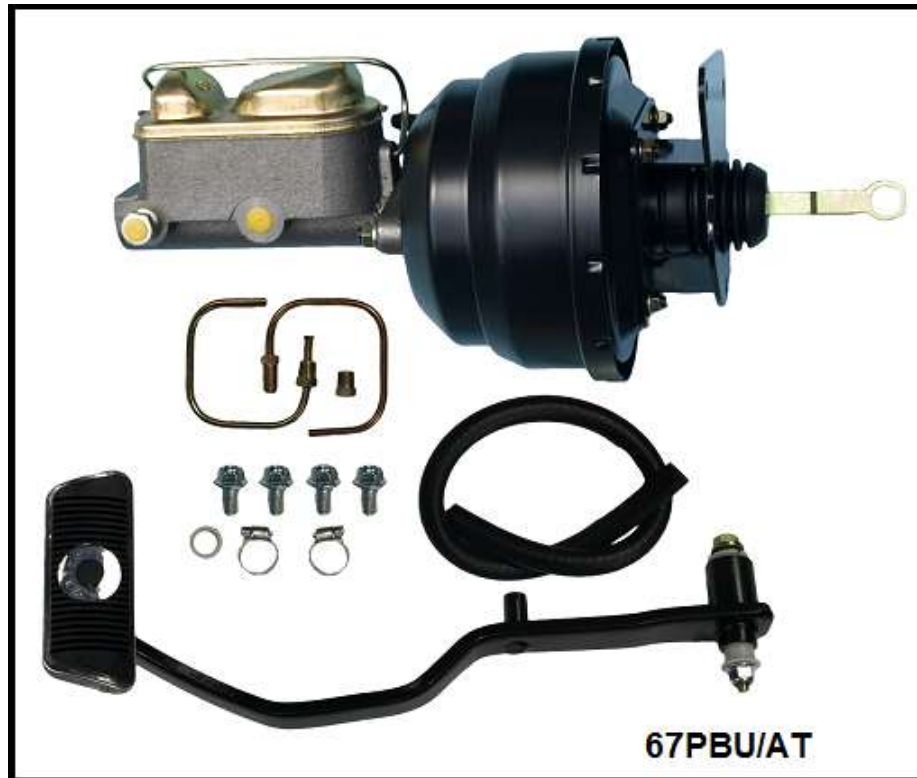

11. Remove the 2 bolts from the firewall which were previously loosened and retightened.
12. Remove the mounting bracket from the rear of the booster (4 nuts).
13. **Loosely** mount this bracket, by itself, to the firewall using the 4 ea 3/8"-16 X 3/4" serrated head bolts provided.
14. Remove the master cylinder from the booster.
15. To bench bleed the master cylinder:
16. Secure the master cylinder on a bench or vise. Remove the master cylinder cap. Fill the reservoir with brake fluid. Remove the caps from the master cylinder outlets. There are 2 approved methods for bleeding the master cylinder.
17. **1<sup>ST</sup> METHOD:** Fit the 2 metal bench bleeding tubes to their outlets with the other end led into the respective reservoir. Actuate the master cylinders piston using a dowel or blunt rod. The piston is stroked slowly, avoiding applying too much pressure at the end of the stroke. Release the piston; it will retract on its own. Note the air being expelled from the tube followed by a solid stream of fluid. Continue until both bleeding tubes expel a solid stream. Remove the bleeding tubes and recap the outlets.

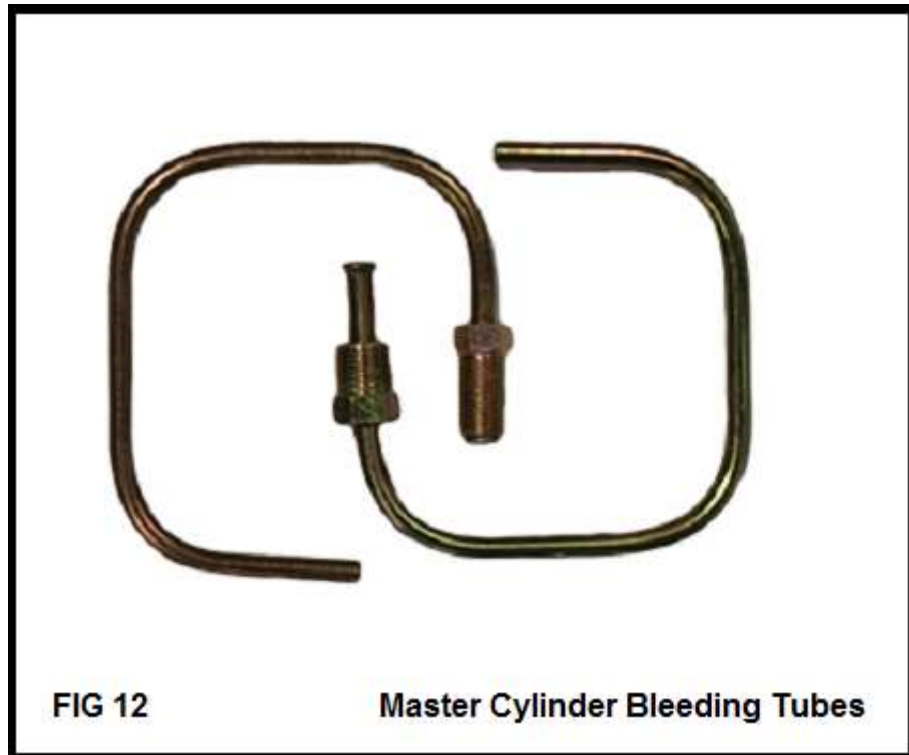


18. **2nd METHOD:** If plugs (full pressure plugs, not just caps) are available, apply them to the outlets of the master cylinder. Actuate the master cylinder's piston using a dowel or blunt rod. The piston is stroked slowly, avoiding applying too much pressure at the end of the stroke. Release the piston; it will retract on its own. Air will be expelled from the bypass orifices in the master cylinder's reservoirs. The piston will be increasingly difficult to depress, eventually becoming so solid that it cannot be depressed.
19. Assemble the adjustable proportioning valve (APV) on its bracket. Since the valve is symmetrical, the knob can be oriented to point toward the inner fender or toward the engine (see the image below).
20. Mount the bled master cylinder and the APV assembly **LOOSELY** to the booster. **Note that the APV bracket is secured between the forward side of the master cylinder and the nuts that secure the master cylinder to the booster. The assembly order is firewall, booster bracket, booster, master cylinder, bracket, nuts.**
21. Thread the booster assembly under the engine compartment cross brace and onto the booster bracket.
22. Reconnect the eyelet end of the pushrod, at the rear of the booster, onto push rod at the rear of the booster is adjustable (in and out). Note that the push rod has been factory set to give proper brake pedal height.
23. Tighten all nuts and bolts (booster assembly and pedal to steering column support).

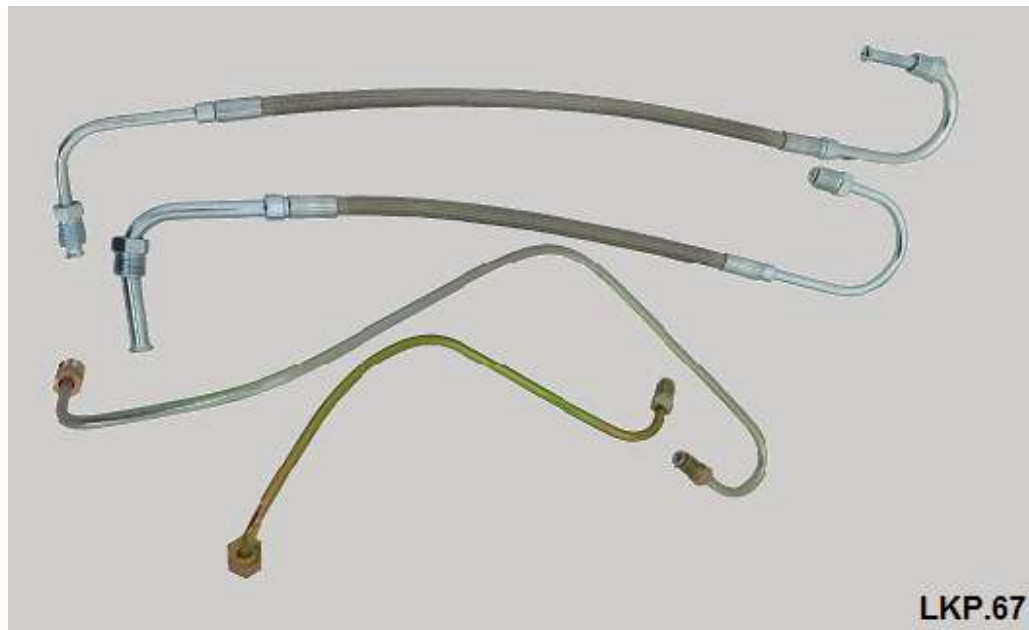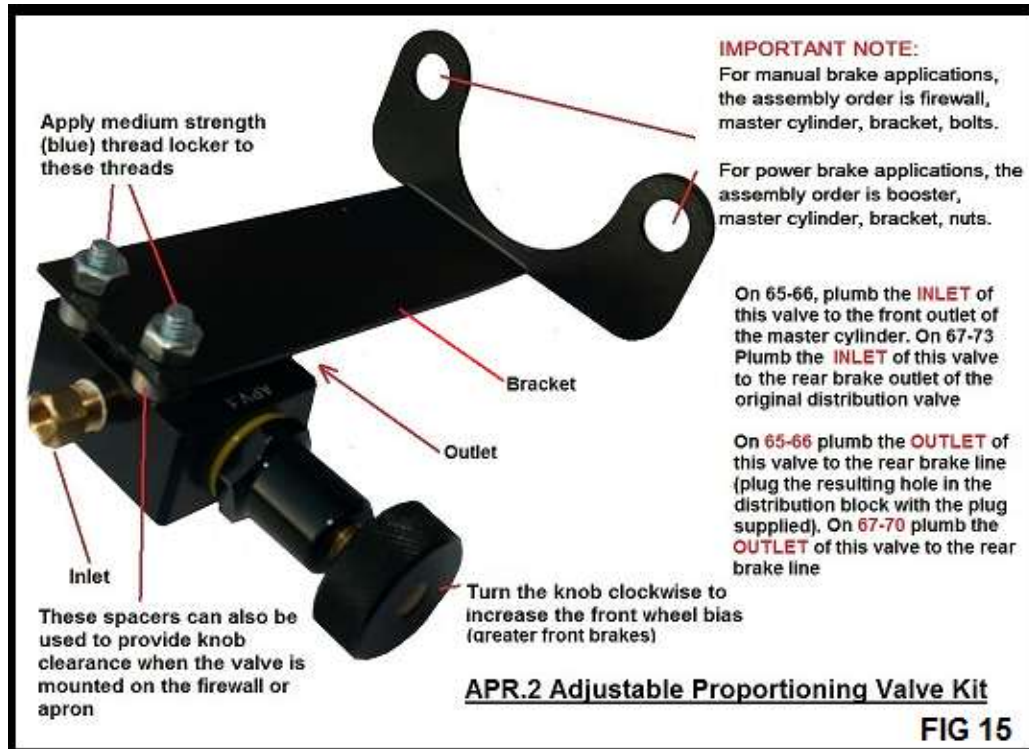

24. Connect the LKP.67 line kit as shown below. The images depict the installation of the under hood brake line kit components.
25. The flare nut at the end of the brake line coming from the rear brakes will now be fitted to the female fitting on the end of the line leading from the outlet of the proportioning valve.




26. **Be sure** to support the female hex fitting with an appropriate wrench when tightening the nut. Failure to do so **WILL** damage the fitting interface with the brake line).
27. Installations of the LKP.67 line kit onto a 70 Mustang will require a few adapters be installed on the distribution block (included with the appropriate kit). See the image below.

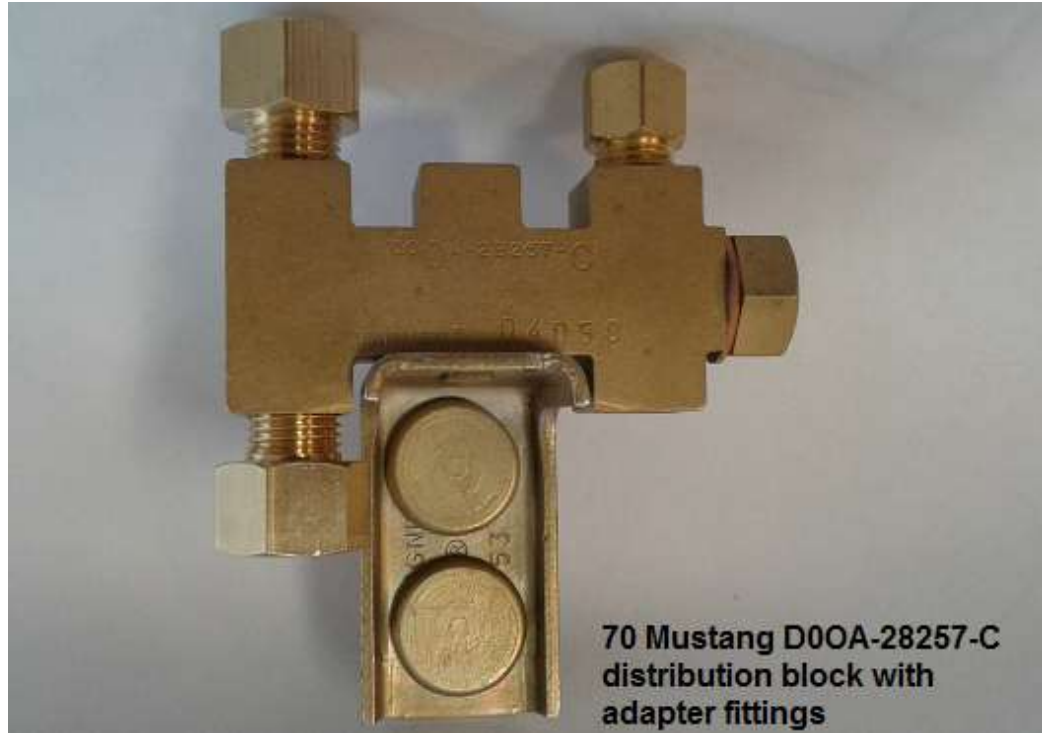

#### F. Bleed the brakes

1. Follow the instructions included with the master cylinder or bleeding aid to bleed the brakes.
2. The task of brake bleeding is made easier if a pressure bleeder is used. The use of speed bleeder screws also makes the task easier. We do not recommend the vacuum bleeding method.
3. The brake pedal should be firm and high when the brakes are properly bled.
4. Be certain that the brake pedal is not adjusted so high as to prematurely actuate the booster.

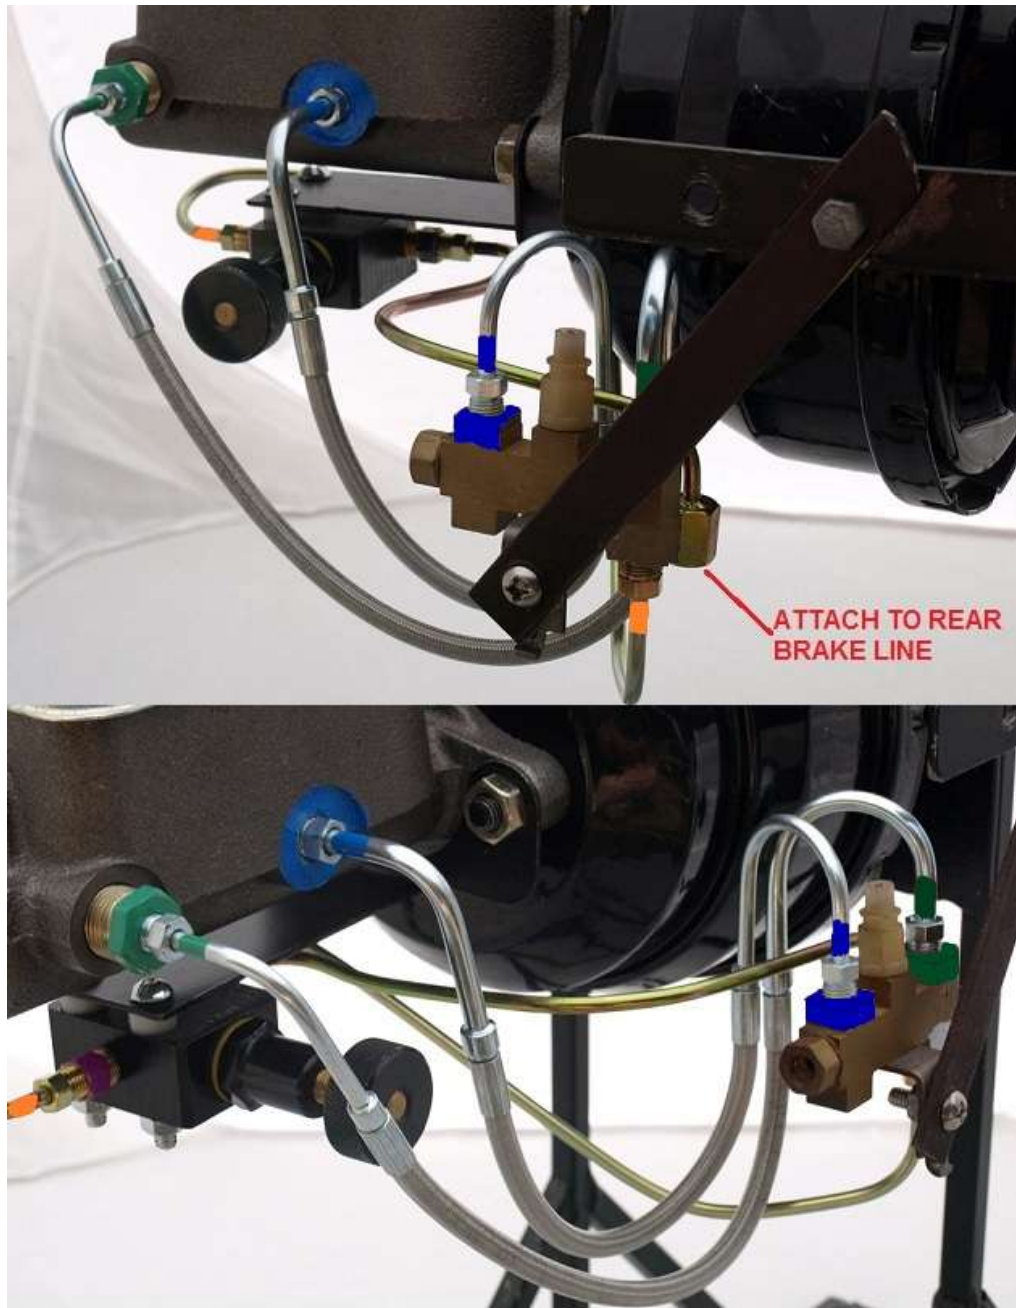

**LINE KIT FOR CSRP POWER BRAKE KIT ON 67-69 MUSTANG**

G. Front wheel alignment and steering issues

1. Remount the wheels.
2. Remove any jack stands or jacks.
3. Place the car on level ground.
4. Center the steering wheel.
5. Adjust the tie rod sleeves to align the front wheels straight forward.

6. You may stretch a line parallel to the rear and front wheel. It should be possible to roughly set the Toe at 0 degree; that is, the wheels tracking straight forward.
7. Tighten the tie rod sleeve bolts.
8. Roughly adjust the caster and camber to 0 degrees.
9. The camber and caster are likely to be way out of specification. The pads and rotor need “bedding-in” before the brakes will work well.
10. Trailering to an alignment shop is recommended. **Be very careful** if you chose to drive the car to the alignment shop.
11. Have the front end aligned to specifications for toe (1/8” toe in), camber (0.0 to - 0.5 degree), and caster (+2.5 degree).
12. Remember to re-torque the sleeve bolts to 40-45 ft-lb upon returning from the alignment shop.

#### H. Setting the adjustable proportioning valve APV

1. The mechanical installation must be complete.
2. Turn the APV knob fully counter clockwise.
3. Find a level isolated location with normal road surface. A parking lot would be ideal. Ignore the common advice to use a wet or gravel surface.
4. Perform a series of normal stops, like at a stop sign.
5. Turn the APV’s knob 1-2 turns clockwise in between each stop.
6. Repeat this process until the stop terminates in a little front end dive. This indicates that the front end has commenced braking first.
7. Some fine tuning may be indicated.

#### I. Pad and rotor bedding-in.

1. Find a level isolated location with normal road surface. A large parking lot would be ideal.
2. Accelerate car to approximately 25 mph.
3. Apply brakes using light to moderate effort to reduce speed to approximately 5 mph (DO NOT stop, if possible).
4. Repeat this process at least 10 times allowing about 1/3 mile between cycles to cool the pads.
5. Avoid hard braking for the first 25 miles.

**The brake SWAP is complete. Carefully inspect all of the work and have a qualified mechanic inspect the work prior to operating the vehicle.**

#### IV. CSRP BRAKE SWAP FAQ

Q. Does the kit come with a dual reservoir master cylinder?

A. Yes, the kit comes with the proper dual reservoir master cylinder. Specify manual or power brakes when ordering. All applications come with an adjustable push rod.

Q. Will I be required to bend and fabricate brake lines for the master cylinder?

A. All CSRP kits come with a full under hood plumbing upgrade kit that includes a combination of braided stainless steel brake lines and steel hard lines that will make it easy to plumbing the master cylinder, proportioning valve and distribution block.

Q. What size are the rotors?

A. The slotted rotors supplied with the kit are 11.2" diameter 5 lug type.

Q. Can I use the outer tie rod ends from my car with the kit?

A. Replacement outer tie rods are included. Reuse the inner tie rod arms.

Q. Do I need to adapt my hard brake lines?

A. The under the fender brake line will need to be modified on the SWAP.2 kits. SWAP.3 and 4 kits do not generally require brake line modification.

Q. What does the kit include?

A. The kit has all NEW parts including caliper brackets, splash shields, an adjustable proportioning valve, performance 11.2" SLOTTED rotors, corrosion protection coated calipers, semi-metallic pads, braided stainless steel brake hoses and new hose mounting brackets and hardware, dual reservoir master cylinder, an adjustable push rod, a complete under hood plumbing kit including braided stainless steel brake lines, bearings and seals, wheel hardware, caliper hardware, grade 8 attachment, blue and red thread locker, high temperature disc brake wheel bearing grease, and our renown installation guide via download. You need only bolt the kit, bleed the system, mount and align the wheels, adjust the proportioning valve, and the installation is complete.

Q. My car has power steering. Will the kit work?

A. Yes, a kit configuration is available for cars with power steering.

Q. My 65-66 Mustang has power brakes (or I want power brakes). Will the car's booster and master cylinder work with the SWAP kit, or will the master cylinder provided with the kit fit on my car's booster?

A. No, the original booster/bracket system used on 65-66 Mustangs is not compatible for use with a dual reservoir master cylinder. There is not enough space between this booster's face and the shock tower to mount one. This is because Ford located the mechanical clutch linkage in a place that interferes with the direct mounting of the booster to the firewall. In order to accommodate both manual and automatic transmission applications with one assembly type, a standoff bracket is employed. This bracket places the booster about 3" away from the firewall. In this position, it will not mechanically interfere with the operation of the clutch linkage. This works fine with the single reservoir master cylinder which is standard to the model, but will not allow the mounting of the dual reservoir master cylinder necessary for a safe modern brake system.

In any case, the original booster/bracket must be removed. This presents the kit installer with a couple of options. For automatic transmission equipped 65-66 Mustang, CSRP offers a compatible MC/booster/ bracket system that will allow the use of the original pedal. One could also install the kit in manual brake mode. When purchasing the SWAP kit for these cars, the installer must specify a manual or a power brake kit. CSRP only offers power assist upgraded kits for Mustang and Cougar.

On a manual transmission car with original power brakes, the installer must still remove the original booster/bracket, but has fewer practical options for power brakes. CSRP offers a power brake upgrade for this application only if the clutch linkage has been replaced with a cable or hydraulic type that eliminates the interference. Otherwise, the user must install the system as manual brakes or find other options.

Q. My 67-69 Mustang has power brakes (or I want power brakes). Will the master cylinder provided work with the SWAP kit?

A. A kit configured for 67-73 can be provided with a power type master cylinder, proper under hood plumbing kit, and no booster at a minimal extra cost when specified. This master cylinder will work with all existing original equipment boosters present on 67-73 cars. Those users wishing to upgrade their manual brakes from manual to power assist brakes can purchase our power brake assist upgrade kit for 67-70 cars. This upgrade kit will fit all 67-70 Mustang, regardless of transmission or engine type. We do not offer power brake upgrades for 71-73 cars, or for other model cars aside from Mustang and Cougar.

Q. Will the SWAP kit give me bumpsteer? What is bumpsteer?



A. No, the SWAP kit installation does not affect the steering or suspension geometry.

Bumpsteer is the change in steering output that occurs without driver input when the suspension moves. Basically, the wheels turn a little in response to going over bumps. This is a result of the fact that the radius of movement for the tie rods and the ball joints are different. Large deflections of the suspension cause different rates of movement of the control arms vs the tie rods causing a small steering input. This affect is most noticeable, if at all, in performance situations.

All Mustangs and many other 60's and 70's cars are based on the Falcon chassis that Ford developed in the early 60's. The suspension and steering gear for all of these cars are very similar. The suspension mounting configuration for the class, including most years of Falcon, Comet, Mustang, Cougar, Fairlane, Torino, Montego, Maverick, Granada, and Monarch remains the same from 63-80. There were basically two steering geometries during the period. The 64-66 Mustang and 63-65 Falcon models have a slightly different geometry than the later models. The later models have identical geometry. CSRP makes 2 series of spindles, so the spindles included in CSRP kits have correct steering and suspension geometries for the year model it is configured for.

It is generally recognized the Falcon class chassis had poor suspension geometry, especially the early applications. It is generally agreed that making major modifications to the suspension, like using lowering coil springs, or cutting coil springs, or excessive lowering of the control arms, can exacerbate the inherent poor steering dynamics of the early Mustang (Falcon chassis).

Q. Can I use my original wheels with the swap?

A. SWAP.2, SWAP.3, and SWAP.4 kits require aftermarket 15" wheels with the OE 5 X 4.5" mounting pattern.

Q. Will the swap work with my 6 cylinder car, and will I need to change the steering gear?

A. One may install the kit if the 65-66 6 cylinder car steering knuckles are replaced with the spindles included with the kit along with replacement of the steering linkage with V8 model type. SWAP.2, SWAP.3, and SWAP.4 kits include year model correct V8 type disc brake specific spindles.

Q. Can I keep my 4 lug wheels with the swap?

A. CSRP offers a 4 lug version of the SWAP.2 kit. It requires aftermarket 15" or larger wheels with OE 4 X 4.5" lug pattern.

Q. How long does it take to do the SWAP?

A. The removal of the old parts and installation of the new ones can easily be done in one weekend.

Q. What does a proportioning valve do?

A. A proportioning valve is a vital component of a disc brake system. It is a metering valve that controls the flow of brake fluid to the rear wheel cylinders. It functions to delay the full implementation of the rear brakes. Without the valve, the rear brakes would apply prematurely. An adjustable proportioning valve is the standard one included with the kit. It has an adjustment knob that functions much like a water faucet except that the flow of fluid is never stopped, just restricted. This valve is simple to plumb, but requires that the installer tune it by trial and error to give the desired rear braking performance (see installation procedure).

Q. Will I need to buy anything else?

A. All parts are included. The cars existing spindles, distribution block, and terminal brake lines are reused. If you chose to replace the brake lines, only the two front terminal lines and the rear terminal line are needed. Drum or disc type are the same with these three lines.

Q. Does the SWAP kit include instructions?

A. The kit includes internet access to the installation guide. This guide goes through the history of the swap, and includes a complete installation guide.

Q. Is the conversion safe?

A. The system is based on an original Ford OEM design. The components are the best available. The installer must be reasonably proficient in mechanics. **Brakes are a seriously necessary component of the safety system of your car. Have the new system inspected by a qualified mechanic before driving the car.**

**CSRP will not accept the liability that the owner assumes when purchasing, installing, or using the SWAP.**

## V. LEGAL NOTICE

This document is only a guide. It in no way represents the ultimate authority on the subject presented. The user must exercise good judgment in relying on its content. It is incumbent upon the user to verify the guidance contained within. The seller of these parts and the authors of this guide provide the service of compiling parts that are generally recognized, when properly assembled, to provide a safe and effective front disc brake substitute for the antiquated drum brakes originally present on certain classic Fords from the 60's and 70's. The

buyer must determine if is appropriate or prudent to undertake this front disc brake conversion using this kit and guide. The SWAP should only be undertaken by those who are competent in automotive brake system mechanics. The completed system must be installed or inspected by a certified mechanic, and any necessary adjustments made. The purchaser of the parts assumes all liability associated with their use. The seller does not accept liability associated with the use of these parts. The parts are warranted to be free of manufacturing defects for a period of 1 year from the time of purchase. This limited warranty is applied to replacement of the defective part(s) only. The warranty does not apply to any labor associated with installation of the part(s). Please see our terms of purchase located at our website [www.discbrakeswap.com](http://www.discbrakeswap.com). The provisions contained there apply to this install and the parts herein.

Thank you for purchasing the CSRP front disc brake conversion kit. Good luck and good motoring.